


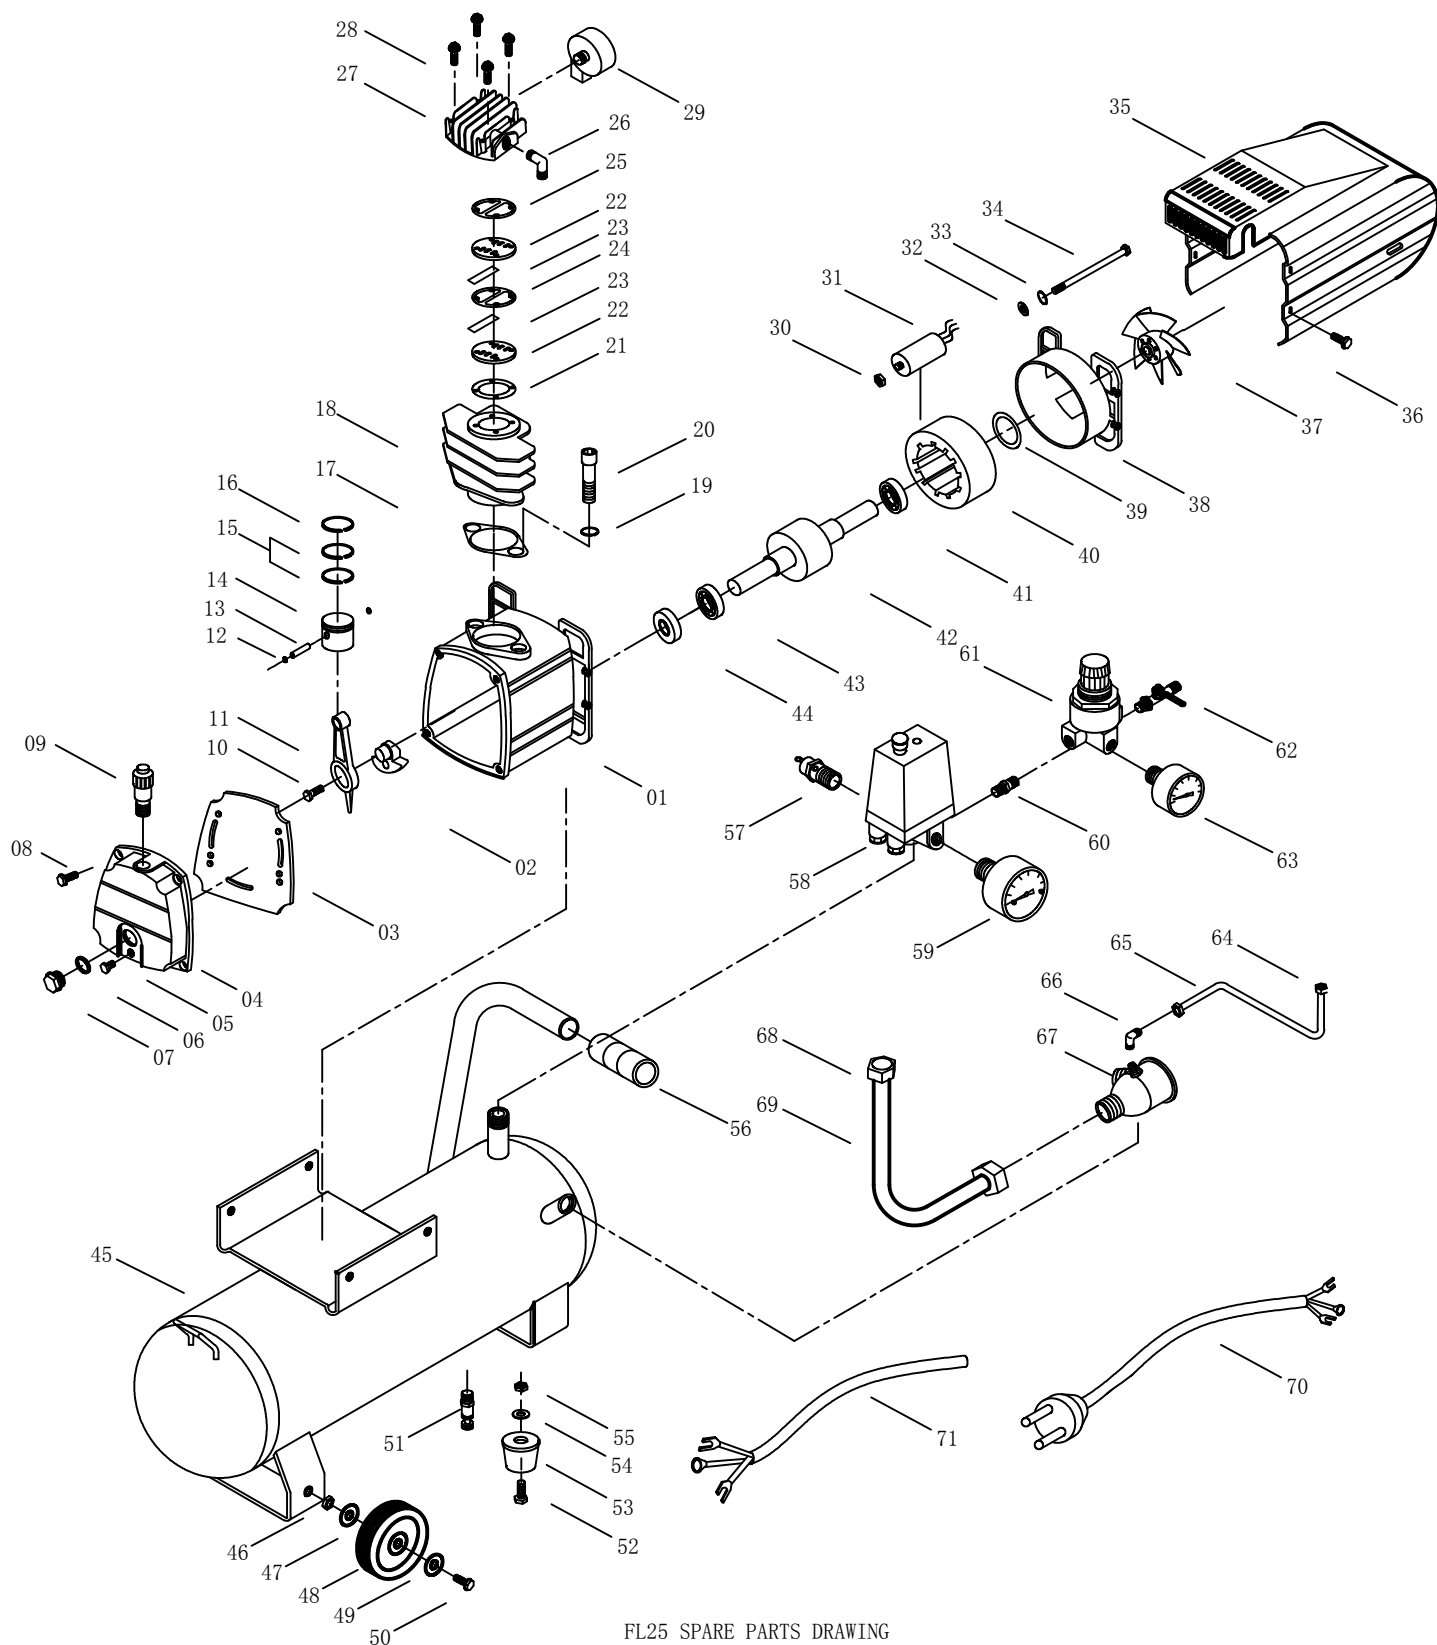

FL25 SPARE PARTS DRAWING

01. crankcase	14. piston	27. cylinder head	40. motor stator	53. cushion foot	66. elbow
02. crankshaft	15. ail ring	28. bolt	41. bearing	54. washer	67. check valve
03. gasket	16. oil ring	29. air filter	42. motor rotator	55. nut	68. exhausting pipe nut
04. crankcase cover	17. cylinder gasket	30. nut	43. bearing	56. handle sleeve	69. exhaust pipe
05. oil plug	18. cylinder	31. capacitance	44. oil seal	57. safety valve	70. plug
06. seal gasket	19. spring gasket	32. washer	45. tank	58. pressure switch	71. power line
07. oil gauge	20. bolt	33. spring	46. nut	59. pressure gauge	
08. bolt	21. valve plate gasket	34. bolt	47. washer	60. connect	
09. breather	22. valve plate	35. cover	48. wheel	61. pressure regulator	
10. bolt	23. valve cushion	36. bolt	49. washer	62. air cock	
11. connecting	24. aluminum gasket	37. fan	50. bolt	63. pressure gauge	
12. circlip	25. cylinder head gasket	38. rear bearing seat	51. drain cock	64. unloading pipe nut	
13. piston pin	26. elbow	39. wave washer	52. bolt	65. unloading pipe	